



## Suspension Arm Bushing: Service and Repair

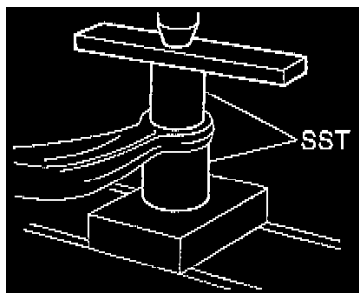

### FRONT BUSHING REPLACEMENT

1. Remove lower suspension arm bushing; using Special Service Tool (SST) 09649 - 17010, 09710 - 04081 and a press, remove the bushing.
2. Install lower suspension arm bushing; using SST 09238 - 47012, 09649 - 17010 and a press.

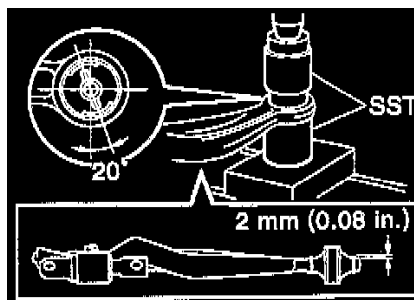

**NOTE:** Install the bushing in the position shown in the image before pressing into lower suspension arm.